

PetCanopies.com

Assembly Instructions

Kit Includes:

Long Bottom Frames: (2) 96 1/2"

Short Bottom Frames: (2) 48 1/2"

Top Back and Front Frame: (2) 96 1/2"

Short Top Frame: (2) 96 1/2" – w/ tilted legs, bolts & nuts

Front Legs: (2) 48"

Back Legs: (2) 60"

Canopy: (1) 8 ft. Long x 4 ft. Wide x 5 ft. High with a 1 ft. slope on the roof.

Tools Needed: Socket Wrench (7/16), Pliers

STEP 1:

a. Unpack the bottom angled frame, layout, and arrange in a rectangle shape (Fig. 1) – long frames should go front and back, shorter frames on the side

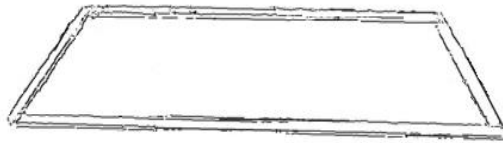


Fig. 1

b. Align frames as shown on Fig. 2

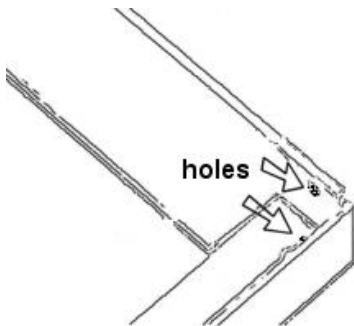


Fig. 2

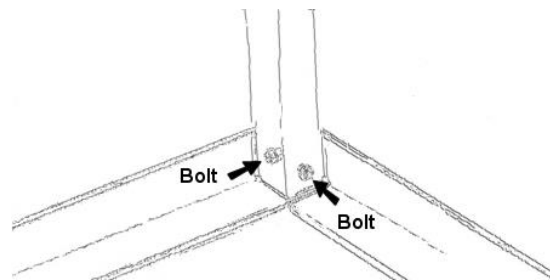


Fig. 3

STEP 2:

a. Install back legs (long ones) on the two back corners of the bottom frame and two front legs (short ones) on the two front corners of the bottom frame

b. Insert both bolts through holes as shown in Fig. 2 above and tighten with a socket wrench (7/16)

c. Nuts should be in the inside of the frame

d. Tighten all four corner frames. Second person can hold frames upright in place while being tightened by first person (Fig. 3)

e. Should be a total of eight (8) bolts and nuts tightened (two for each corner). Set bottom frame aside

(Continued next page)

STEP 3:

- a. Unroll canopy and assemble roof frame with fabric (Fig. 4)
- b. Make sure both of the side poles are facing the same direction to make the slope

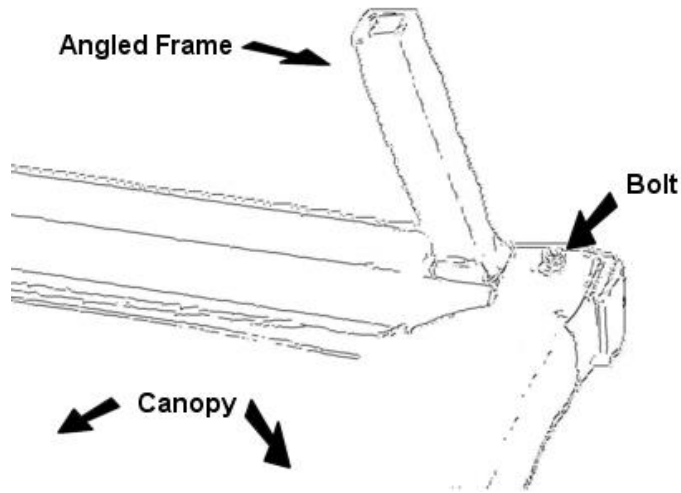


Fig. 4

- c. Tighten all four (4) bolts from each corner pole

****Make sure the sewed canvas is turned inside (don't want the seams to show on top)****

STEP 4:

- a. You will now assemble both parts – bottom frame to top frame
- b. Match the sloped angles of the top and bottom, and connect them – Fig. 5

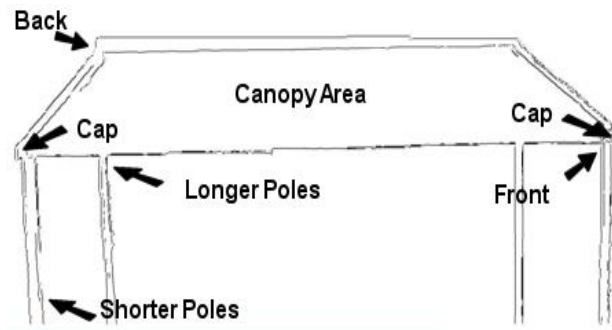


Fig. 5

Average time to assemble pet canopy is about 30 minutes. For video instructions, visit petcanopies.com

Canopy assistance - 915-329-8346

THANK YOU FOR THE PURCHASE!